


## Trouble Shooting Guide

Trouble	Checkpoint	Contents	Action
Poor flow rate	Regulator	Check any impurities.	Remove all impurities.
	Angle valve	Check valve position.	Open it to full valve
	Flexible hose	Check if hose is twisted.	Untwist the hose.
Leakage	Cartridge packing	Check cartridge install.	When packing is damaged, replace the cartridge.
	Hose junction	Check the connection.	Check the existence of packing and wind it up sufficiently
Deviant Temperature	Supply Valve	Check if the water from Supply valve is enough or not	Increase water supply
	Supply ystem	Check if the supply pipe connected correct or not	Connect the hot and cold water pipe correctly

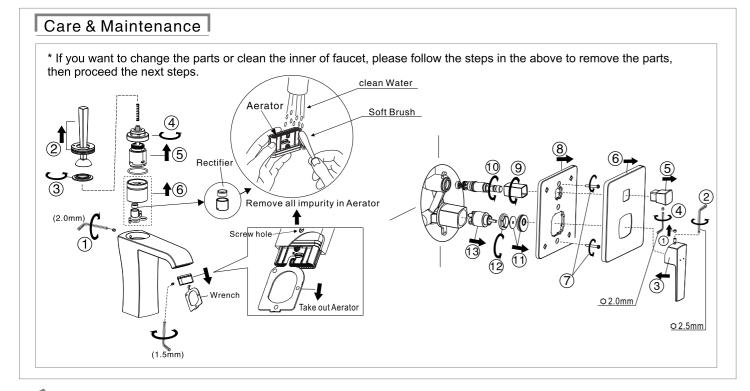



**Attention Installer:** Leave this information to the customer after installation is complete

## Neo Nobile


WF-0602.XXX.50 Joystick Handle Lava Faucet WF-0603.XXX.50 Joystick Handle Vessel Faucet


WF-0621.XXX.50

Concealed Bath & Shower Mixing Valve

WF-0622.XXX.50

Concealed Shower Only Valve

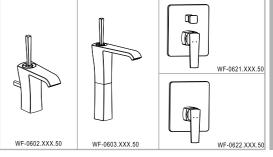

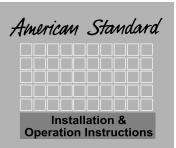

Thank you for selecting American-Standard - the benchmark of fine quality for over 100 years. To ensure that your installation proceeds smoothly--please read these instructions carefully before you begin.

\* American Standard always keep raising and improving the product design and performance, and reserve the right to modify the dimension and spefication. At this case, we will not inform you separately.

\* This installation instruction sheet is for your reference only, the dimension and specification is subject to the actual products. All instruction procedures must comply in strict accordance with applicable local plumbing and building codes

## Pre-Installation Checks

 
\*Remove all impurity in pipes before beginning to avoid clogging. Connect faucet pipes correctly. Make sure the cold water hose is connected to the right side and the hot water hose to the left.


\* Check installation distances in the Dimension diagram to ensure correct installation.

## Conditions for use

- \* Recommended water pressure condition: 0.1~0.5Mpa.
- \* Environment Temperature:1~55 °C
- \* Steam is not allowed to use.
- \* The cold and hot water pipes must not be reserved.


When in the process of installation, grab the whole body. Do not grab handle only.




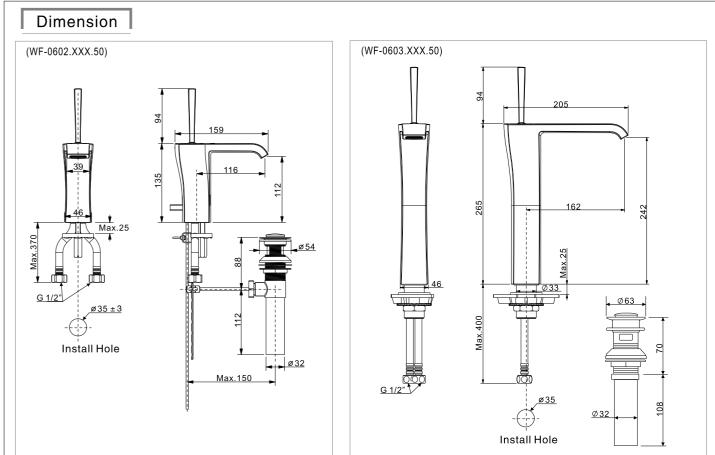



-1-

Fed.2011

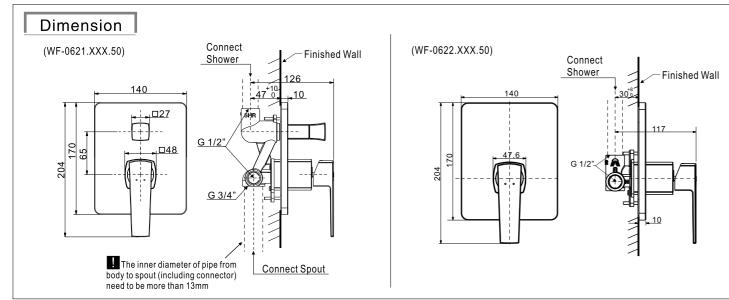

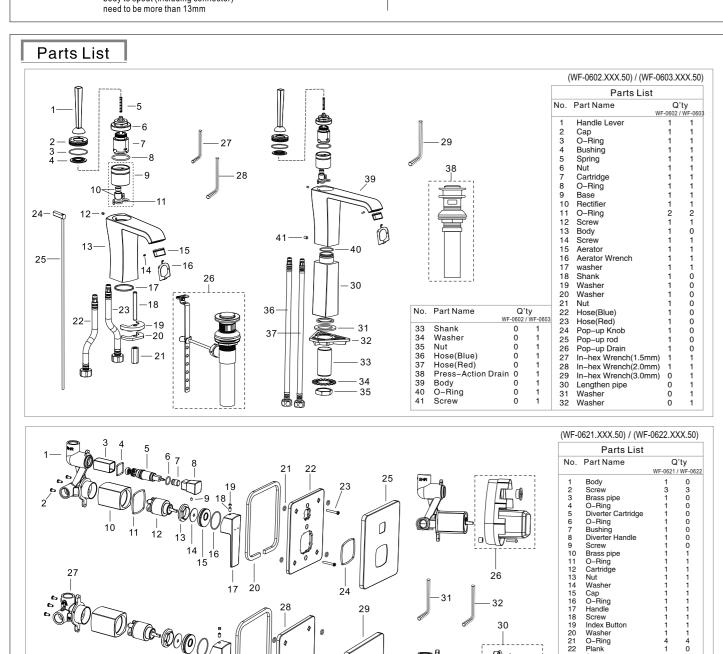

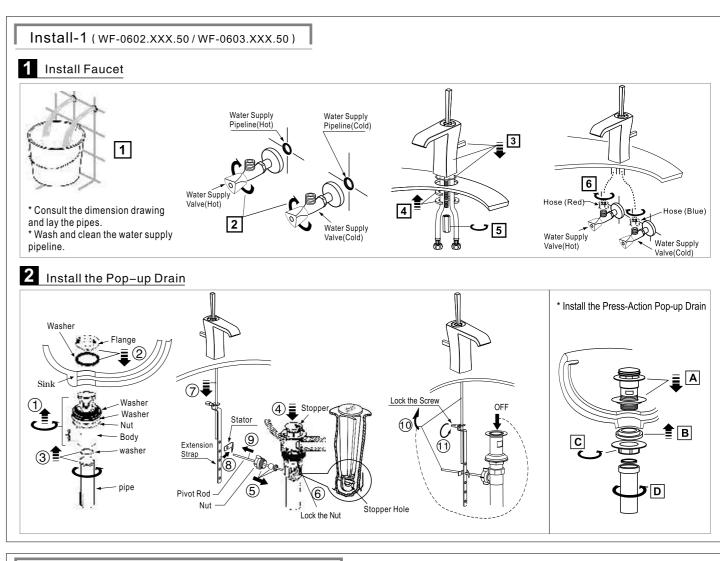

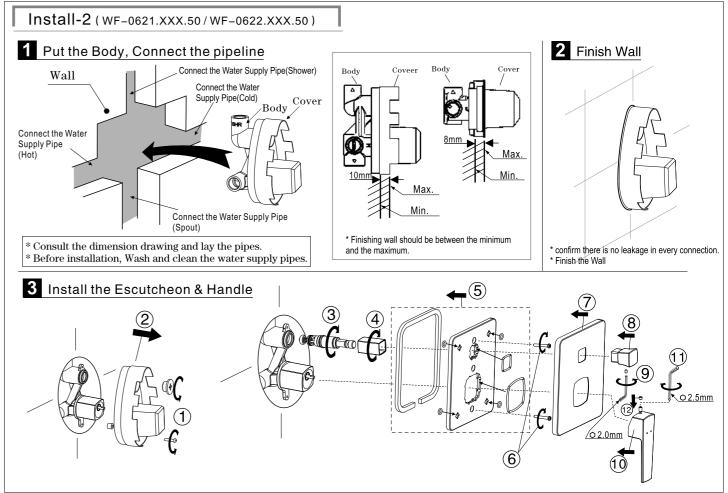

Cover 1
Body 0
Plank 0
Escutcheon 0
Cover 0
In-hex Wrench(2.0mm) 1
In-hex Wrench(2.5mm) 1