



单把手抽拉式厨房龙头

安装说明书

One-Handle Pullout Kitchen Faucet

INSTALLATION INSTRUCTIONS

如需安装支持, 配件丢失或替换等, 请联系本公司。
对于中国大陆以外的市场, 请咨询当地经销商。

(中国大陆) 400-630-8866

(中国大陆) www.moen.cn

(中国大陆以外) www.moen.com.hk

For installation support, missing or
replacing parts, etc., please contact the company. For
consumers in markets outside the Chinese
mainland, please consult the local dealer.
(Chinese Mainland) 400-630-8866
(Chinese Mainland) www.moen.cn
(Outside Chinese Mainland) www.moen.com.hk

推荐工具

为了安全和让安装和替换变得容易, Moen建议
您使用以下工具:

HELPFUL TOOLS

For safety and ease of installation and
replacement, the company recommends the use
of the following tools:



护目镜
Safety Glasses




活动扳手
Adjustable Wrench



十字螺丝刀
Cross Screwdriver



剪线钳
Wire Cutters

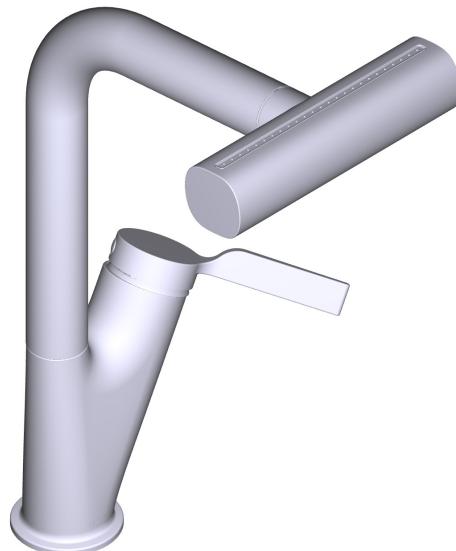


图片仅供参考
(款式因型号而异)

Image is for reference only
(Style varies by model)

记录购买的型号:
(保存安装说明书以备将来参考)

Record Purchased Model Number:
(Save instruction sheet for future reference)

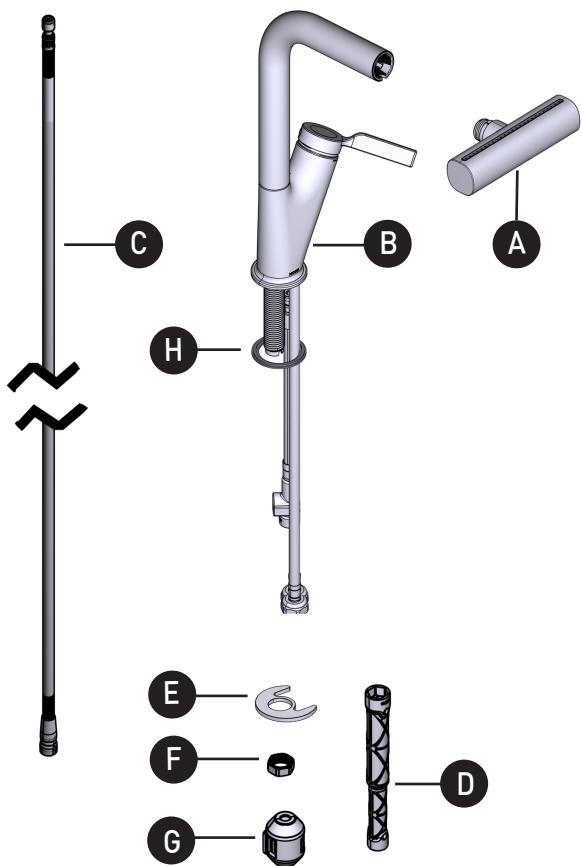

零配件清单

- A. 喷嘴
- B. 水龙头主体
- C. 抽拉软管
- D. 套筒扳手
- E. 安装垫片
- F. 安装螺母
- G. 配重块
- H. 防水件

Parts List

- A. Spray Wand
- B. Faucet Body
- C. Pullout Hose
- D. Socket Wrench
- E. Mounting Gasket
- F. Mounting Nut
- G. Hose Weight
- H. Gasket



移除旧龙头注意事项:

拆除现有水龙头或拆卸阀门之前, 请务必先关闭供水。打开水龙头手柄以释放水压, 确保完全关闭水源。

CAUTION — TIPS FOR REMOVAL OF OLD FAUCET:

Always turn water supply OFF before removing existing faucet or disassembling the valve. Open faucet handle to relieve water pressure and ensure that complete water shut-off has been accomplished.

图标图例 Icon Legend




警告
Warning



水槽上方
Above sink




水槽下方
Below sink

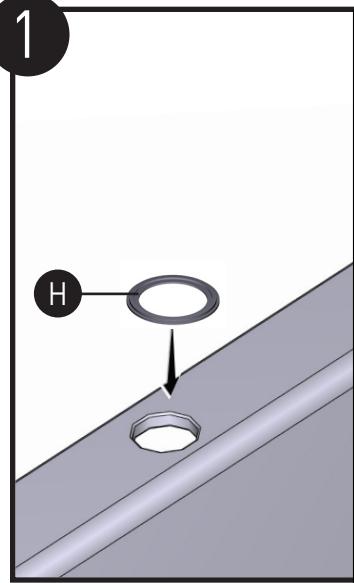


将防水件 (H) 放在水槽顶部。将水龙头主体 (B) 放入水槽中。

Place the Gasket (H) on top of the sink and insert the Faucet Body (B).

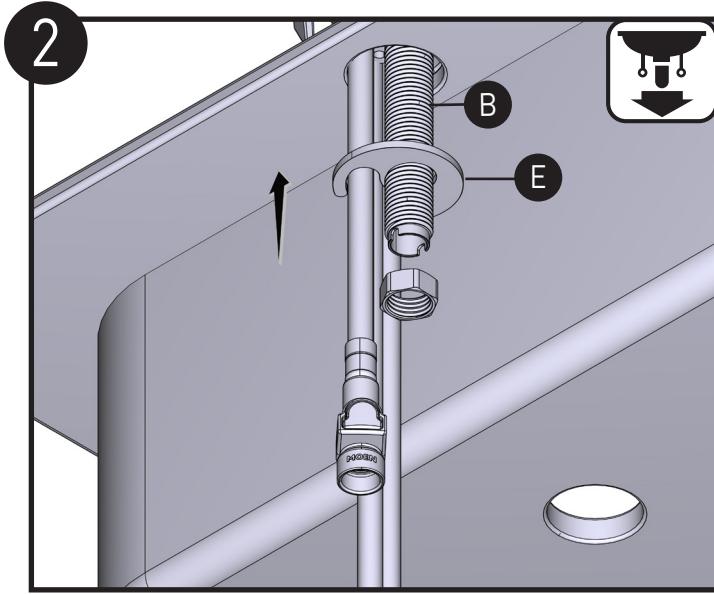


将安装垫片 (E) 按如图所示的顺序安装到水龙头主体 (B) 上。

Install Mounting Gasket (E) onto the Faucet Body (B) in the order shown above.

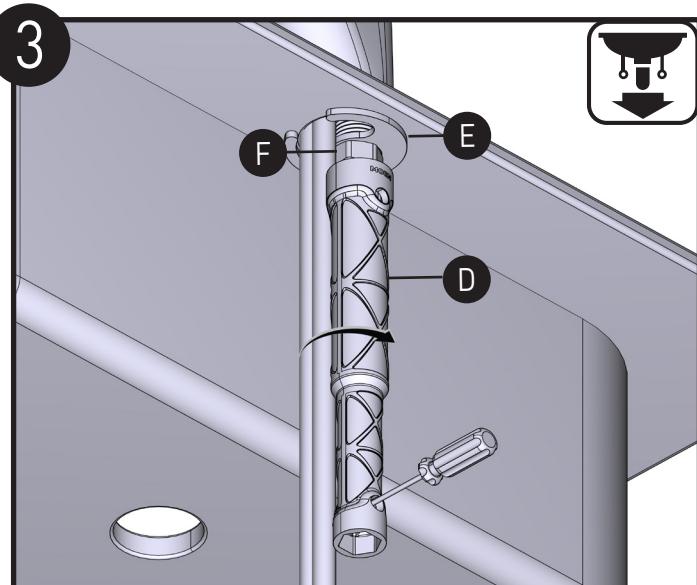

用安装螺母 (F) 将安装垫片 (E) 固定后, 用套筒扳手 (D) 将安装螺母 (F) 拧紧。


Secure Mounting Gasket (E) with Mounting Nut (F). Tighten the Mounting Nut (F) with Mounting Tool (D).

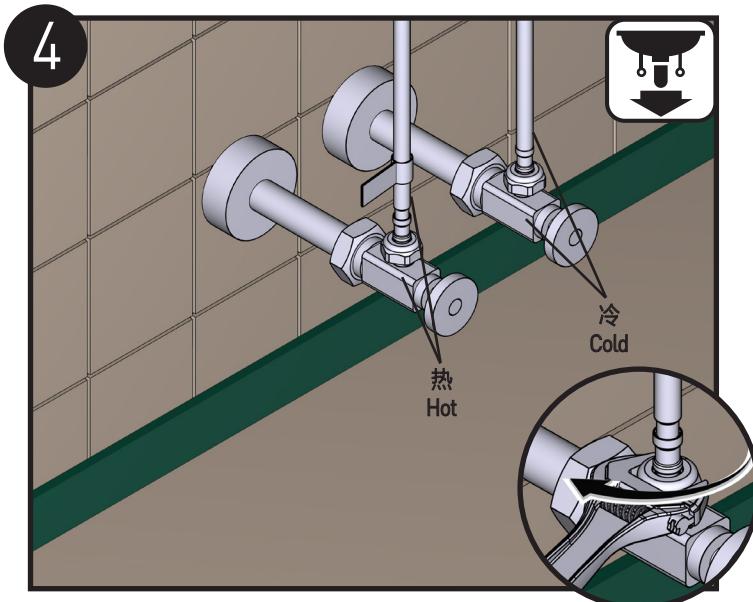

将水龙头冷热水管分别正确地连接到冷热进水口。

Check that hot and cold water supply lines are connected correctly to hot and cold supplies.


5

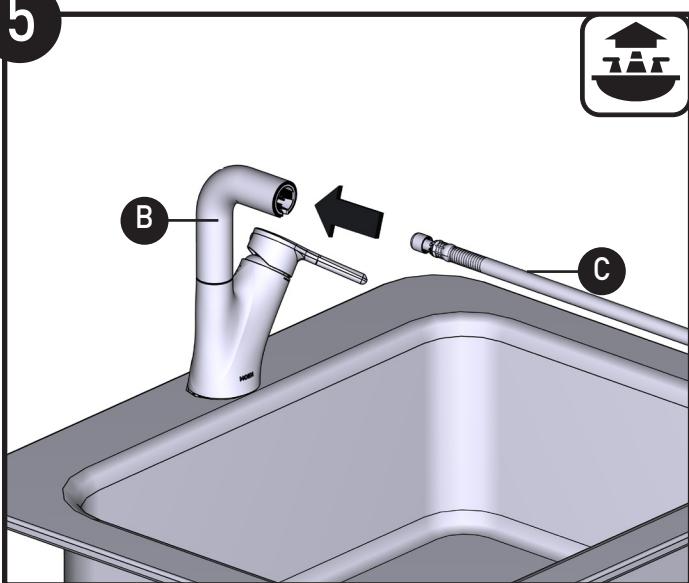

将抽拉软管 (C) 从水龙头主体 (B) 插入安装。注意: 安装时请勿先取下抽拉软管 (C) 的保护盖。

Insert Pullout Hose (C) into opening and feed through Faucet Body (B) until wand is docked. Note: Do not remove the Plastic Cap of Pullout Hose (C) first during installation.

6

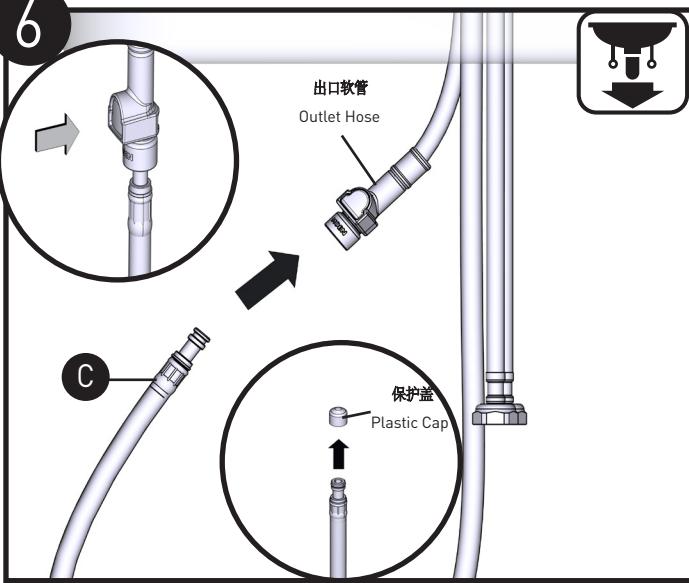


拔掉抽拉软管 (C) 的保护盖, 将抽拉软管 (C) 装到出口软管上。尽可能往内推, 直到听到“咔嗒”声。向下拉测试安装是否牢固。注意: 如果想拆下抽拉软管 (C) 可按下开关同时向下拉。

Remove and discard the plastic cap from the end of the pullout hose. Install the pullout hose to the outlet hose. Push the hoses gently together until a “click” is heard. Tug downward to test engagement

NOTE: To release the hose connection, press the outlet hose switch and pull the pullout hose gently.

7

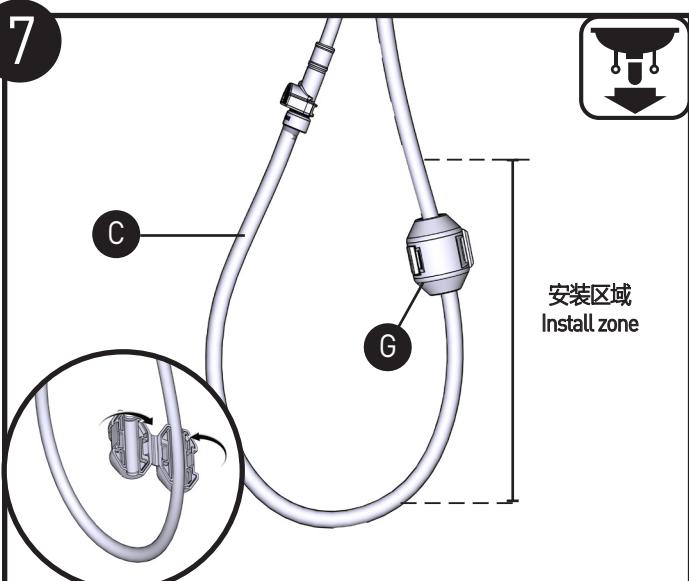


将配重块 (G) 打开, 扣在抽拉软管 (C) 上。

注意: 安装配重块的时候请调整并保证抽拉功能操作顺畅。


Install Hose Weight (G) between the bottom of the hose curvature and white tape of Pullout Hose (C). See above for recommended install zone locations.

NOTE: The installation of the hose weight must ensure that the pullout function works well.

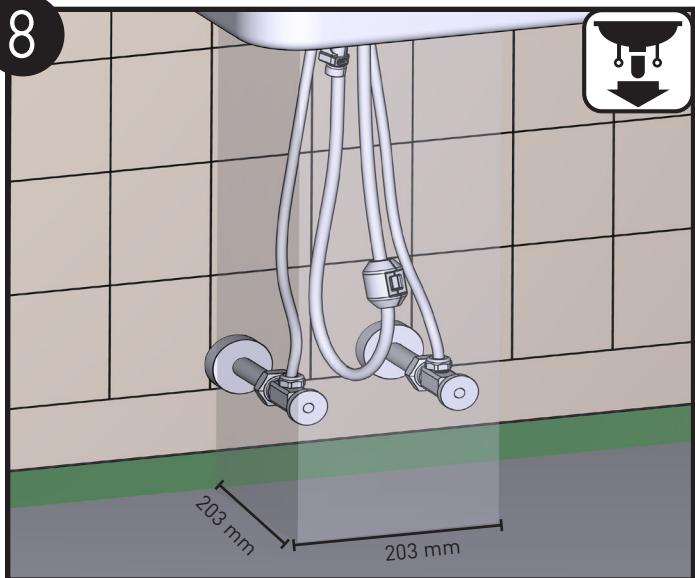


为保障您的新抽拉式水龙头处于最佳状态, 摩恩建议如下: 保留 203mm*203mm 的空间以保证软管和配重块的滑动顺畅。

For best performance, Moen recommends keeping a 8" [203mm] x 8" [203mm] area clear under your sink for easy access to install and adjust the water supply lines.

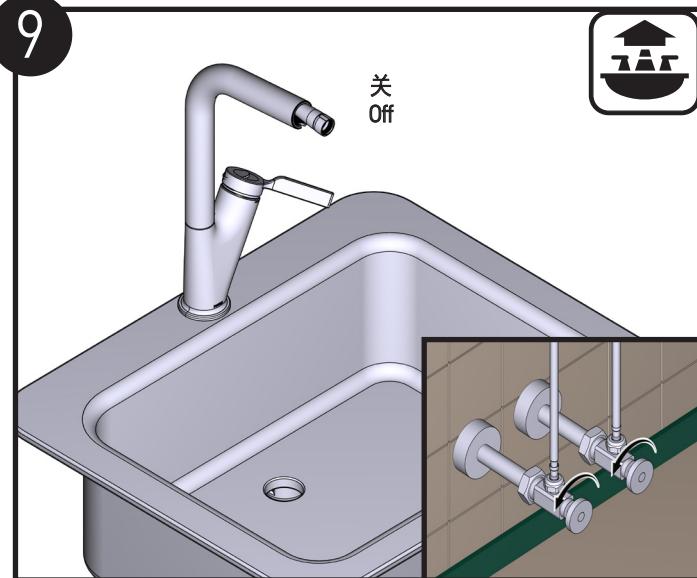


将水龙头调整至关闭状态, 打开冷热水管的开关。

Ensure the handle is in the "OFF" position and turn on the hot and cold water supply lines.

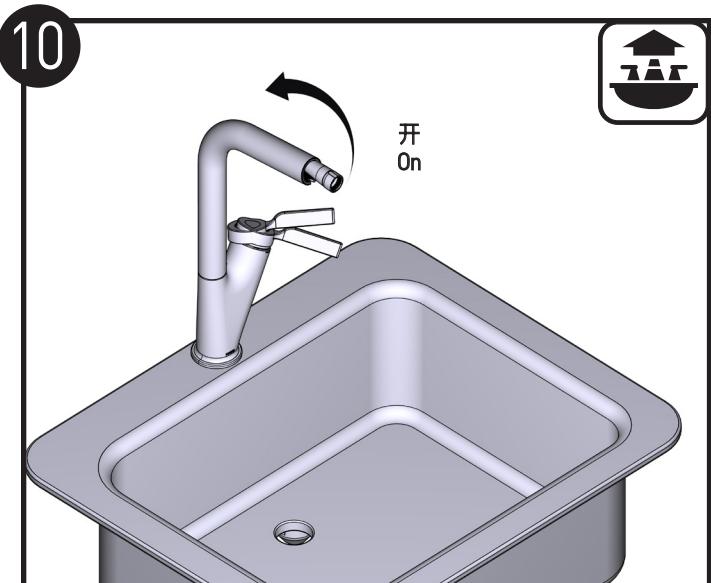

打开水龙头开关测试出水是否正常。


Move the handle to the "ON" position and check for leaks.

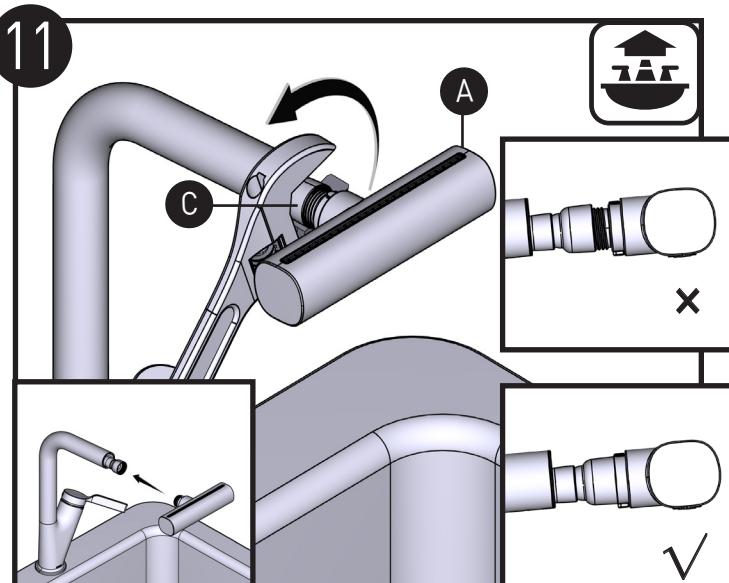

先用手连接并拧紧喷嘴 (A) 与抽拉软管 (C) , 如果没有达到安装效果, 可用活动扳手锁紧。注意: 不需过于用力, 以防损坏喷嘴。


Thread the Spray Wand (A) onto the Pullout Hose (C) and tighten manually. If necessary, use an adjustable wrench to tighten.

NOTE: Do not overtighten.

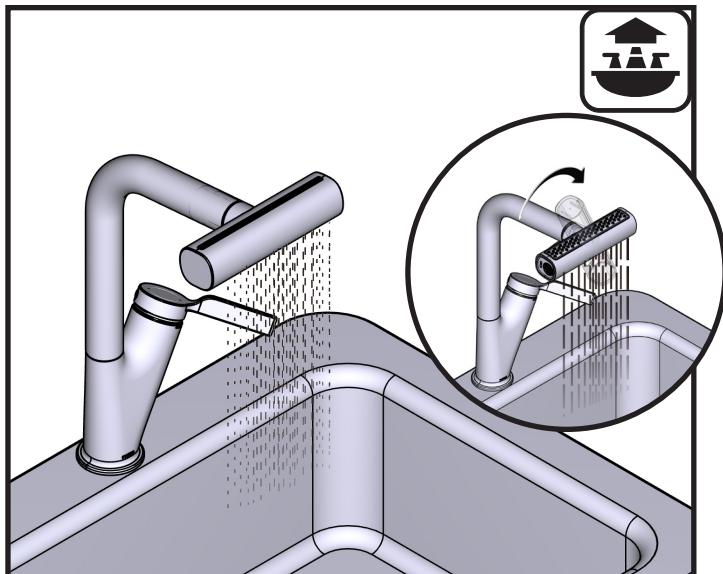产品使用说明 Usage Instructions


反转喷嘴切换水流型态。

Flip the Spray Wand to change the flow pattern.

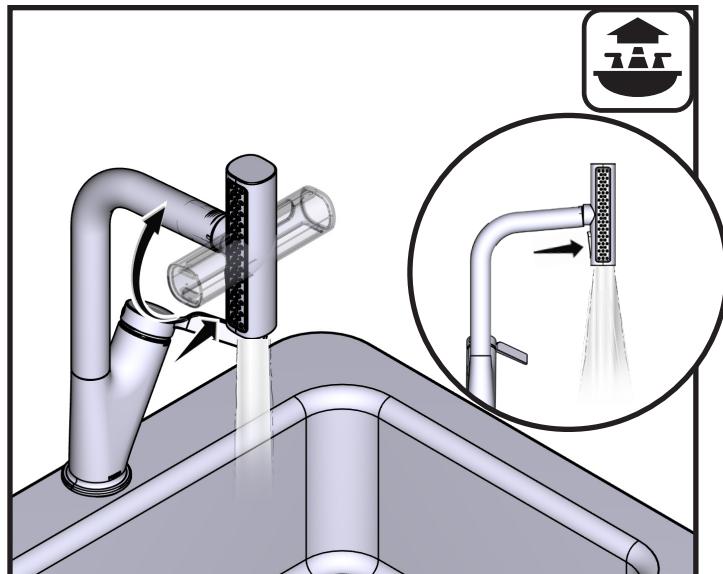


竖直喷嘴并按下开关切换水流型态。

Erect the Spray Wand and press the toggle switch to change the flow pattern.

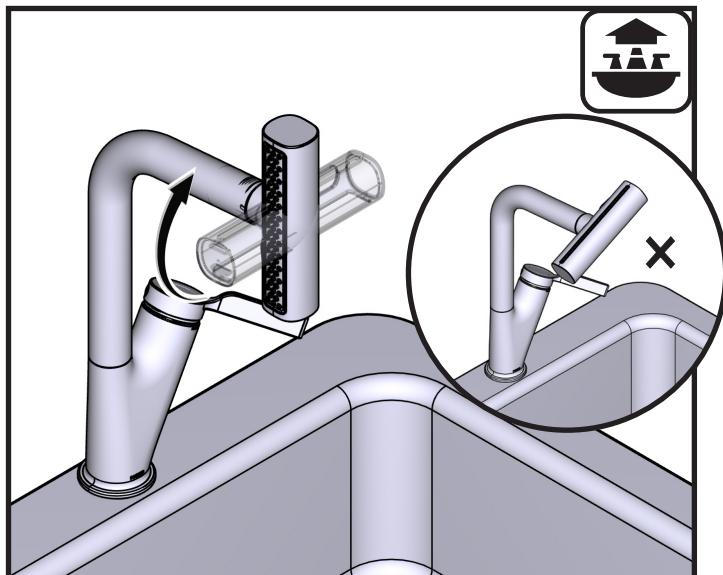


转动喷嘴切换水型时，需将喷嘴转到水平或竖直位置再使用。使用完毕后，需用把手关闭龙头。喷嘴未切换到正确位置或未用把手关闭龙头会有窜流现象或承压损坏风险。

When changing flow pattern, rotate the wand to horizontal or vertical position before use. After use, turn off the faucet by the handle. Incorrect wand position or turning off the faucet without using the handle may lead to cross-flow or pressure-related damage.

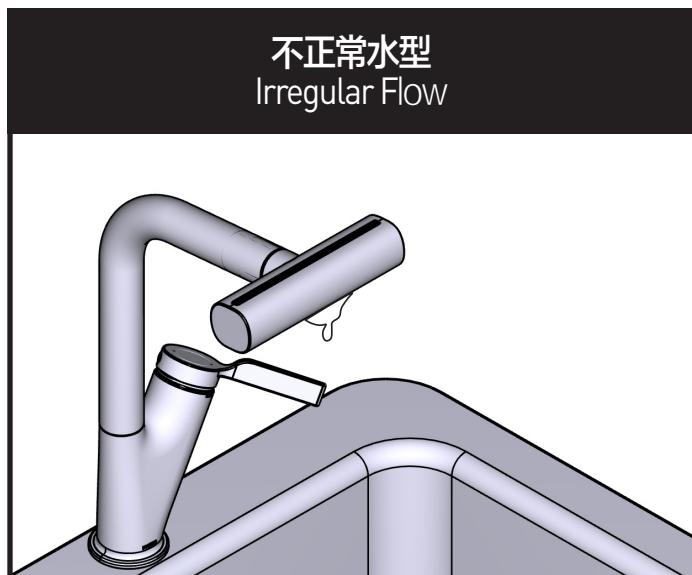


按照步骤 A 到 D 来处理不正常的水型。

Follow Steps A - D if there is a change in the water flow.

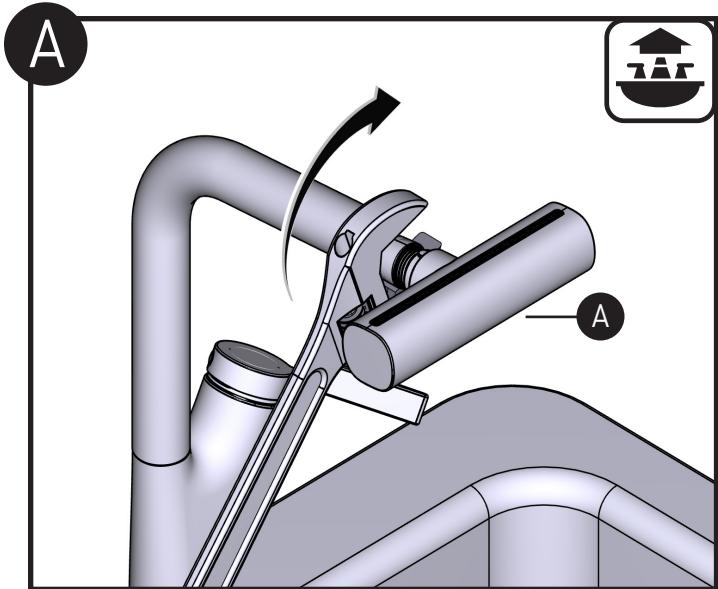


将喷嘴 (A) 拆下。如有必要, 请使用活动扳手。

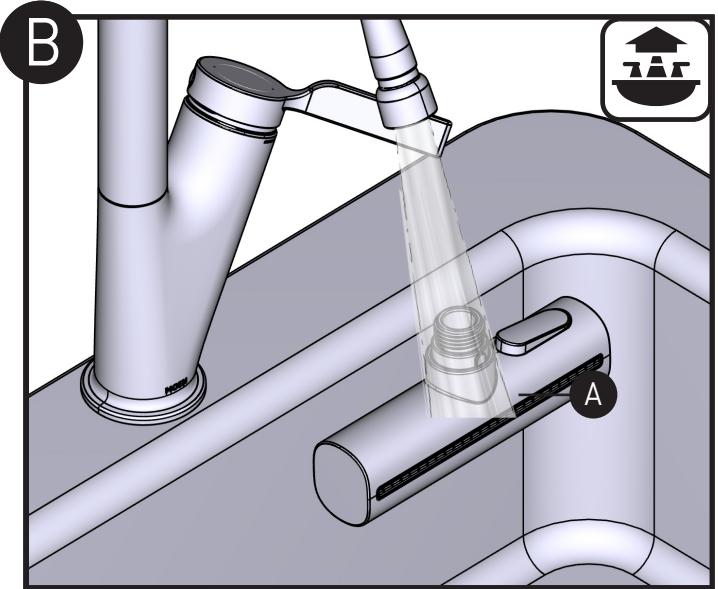

用水冲洗喷嘴 (A), 清洗至无可见碎屑等堵塞物。关闭开关然后, 重新安装喷嘴 (A)。

Unscrew and remove the Spray Wand (A) from the Pullout Hose (C) by hand. If necessary, use an adjustable wrench to unscrew.


Clean Spray Wand (A) as shown to remove any possible debris. Turn off water and reinstall Spray Wand (A).

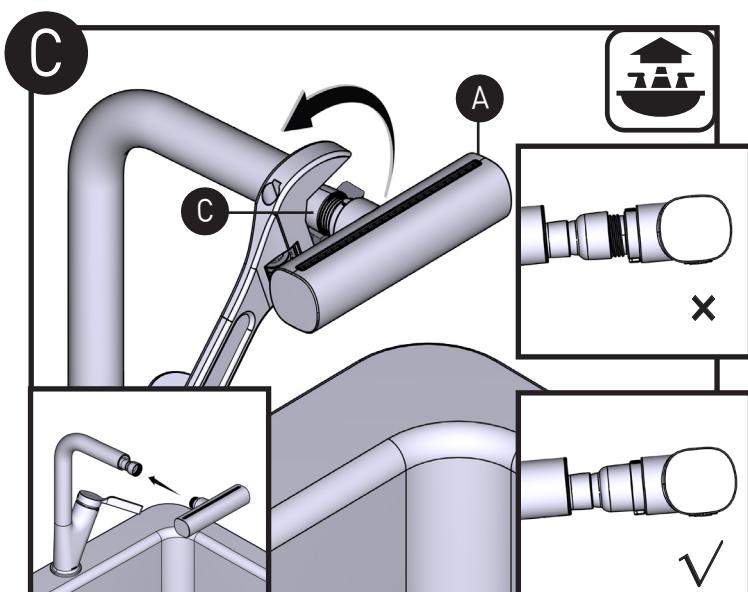

重新用手连接并拧紧喷嘴 (A) 与抽拉软管 (C) , 如果没有达到安装效果, 可用活动扳手锁紧。注意: 不需过于用力, 以防损坏喷嘴。

Thread Pullout Hose (C) onto Spray Wand (A) and tighten manually. If necessary, tighten by an adjustable wrench.

Note: Do not overtighten.

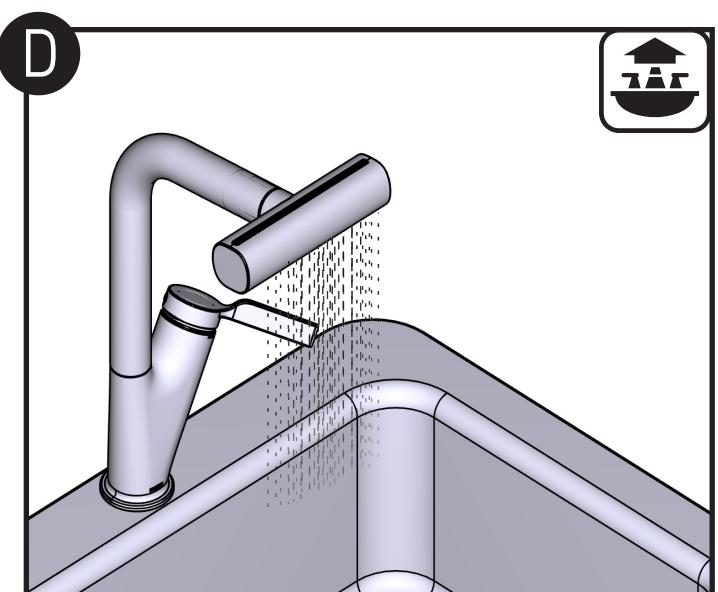

打开开关, 水流恢复正常。如果没有恢复请重复步骤A到C。

Turn on the faucet to see if the flow rate has improved. If not, repeat Steps A-C.

